

## User guide for RødeCaster Pro


# Recorder

**1** Turn on the Rødecaster by pressing the red button on the back (right side) of the Rødecaster. Hold the button for 1 second, release, and the Rødecaster will power on.

**2** Use your headphones to check that you have sound when speaking into the microphone. You can control the volume level in the headphones by using the volume knobs (1-4) on the right side of the display screen.

**3** Set the slider for each microphone channel and the Master channel to a comfortable listening volume. Check that the mute button is deactivated if you do not hear sound.

**4** Press REC to start and stop recording.

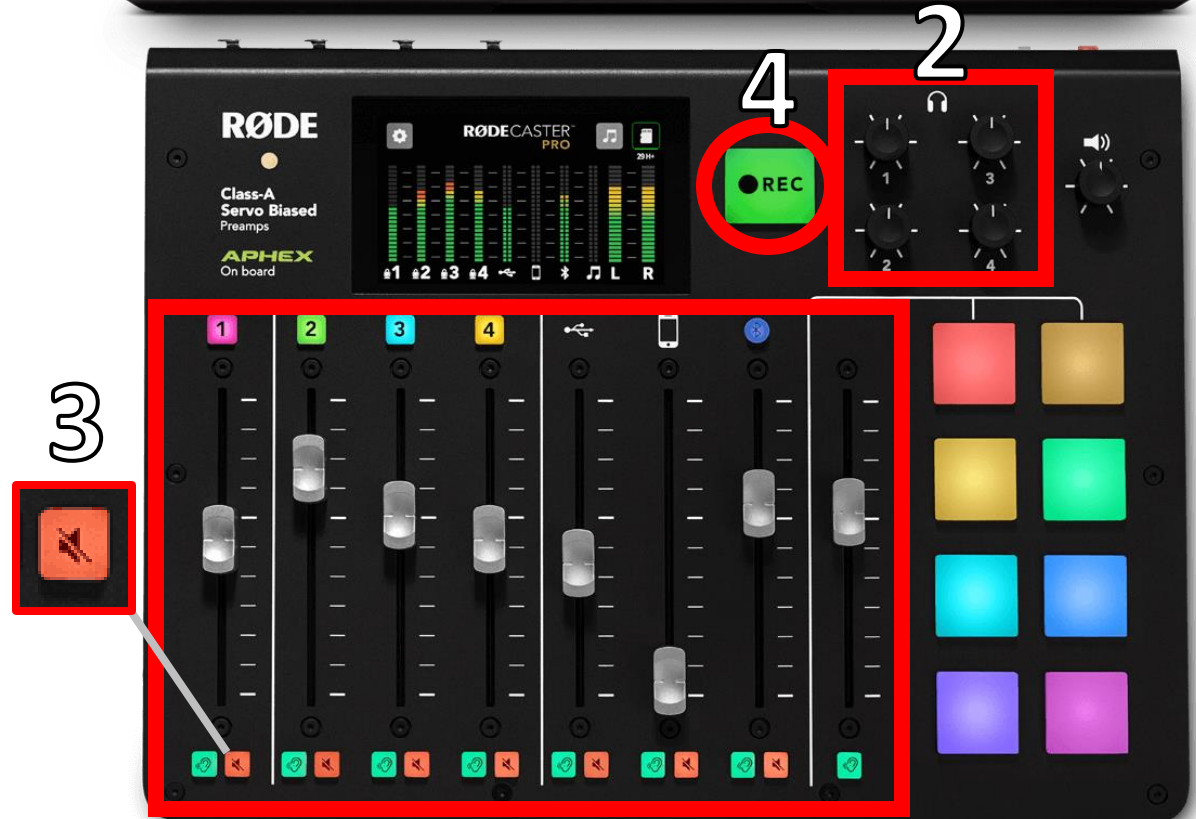

RødeCaster Pro  
User Guide



Quick Start  
Guide



Setting up  
Microphone  
Channels

## Hurtigguide for RødeCaster Pro


# Opptakeren

**1** Slå på opptakeren ved å trykke på den røde knappen bak på høyre side av opptakeren. Hold inne i ett sekund, slipp, og opptakeren slår seg på.

**2** Tå på deg hodetelefoner og sjekk at du har lyd når du snakker i mikrofonen. Du kan styre lydstyrken i hodetelefonene ved å bruke volumknottene (1-4) til høyre av displayet.

**3** Sjekk at spaken for hver kanal er satt til lyttevolum (markert sterk) og at ikke muteknappen under spaken står på.

**4** Trykk REC for å starte og stoppe opptakeren.

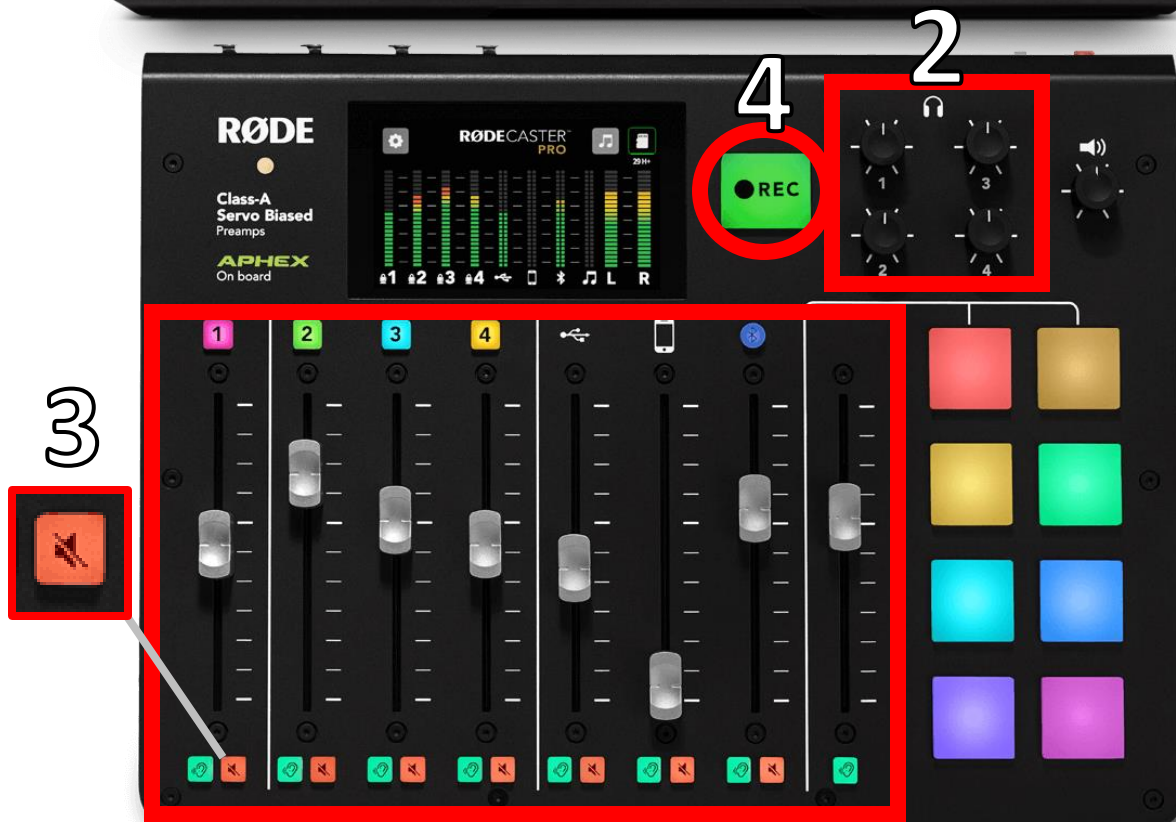

RødeCaster Pro  
User Guide



Quick Start  
Guide



Setting up  
Microphone  
Channels